


**Schaltbild • Circuit diagramm • Schema du poste • Esquema del aparato**


**Anschlußplatte  
Connector board**  
PL 8012 A04

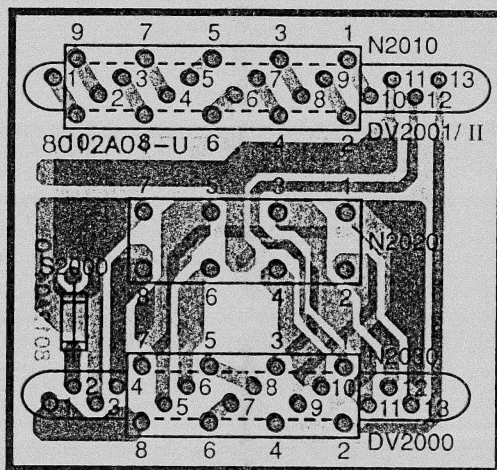

DV2001 / II	
1 =	LR - PREAMP
2 =	LF - PREAMP
3 =	RR - PREAMP
4 =	RF - PREAMP
5 =	NF - GND
6 =	U14 - CHANGER
7 =	TEL MUTE
8 =	NF - AUX
9 =	L - IN
10 =	R - IN
11 =	DIG - GND
12 =	SCI - TXD
13 =	SCI - RXD

DV2000	
1 =	GND
2 =	UD
3 =	LR - OUT +
4 =	LR - OUT -
5 =	LF - OUT +
6 =	LF - OUT -
7 =	U - DIM
8 =	U - ANT
9 =	U - ZÜND
10 =	RF - OUT -
11 =	RF - OUT +
12 =	RR - OUT -
13 =	RR - OUT +

**Kontaktplatte  
Connector board**  
PL 8011 A04

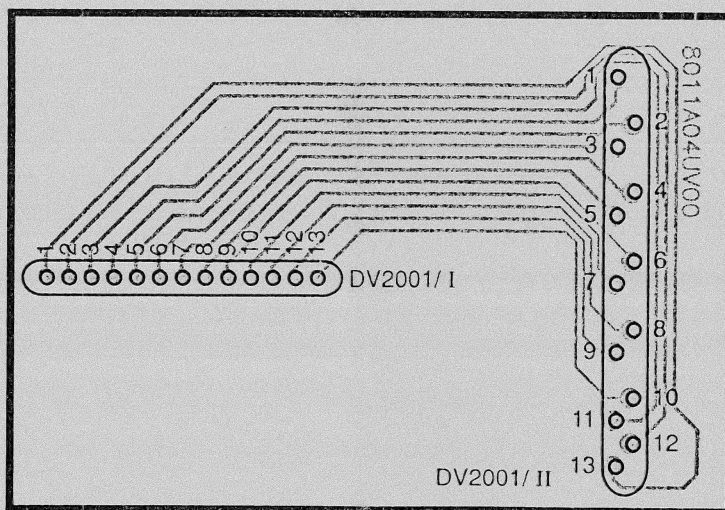

DV2001 / I	
1 =	SCI - RXD
2 =	SCI - TXD
3 =	GND
4 =	LR - PREAMP
5 =	LF - PREAMP
6 =	RR - PREAMP
7 =	RF - PREAMP
8 =	GND
9 =	U14 - CHANGER
10 =	TEL MUTE
11 =	NF - AUX
12 =	L - IN
13 =	R - IN


DV2001 / II	
1 =	LR - PREAMP
2 =	LF - PREAMP
3 =	RR - PREAMP
4 =	RF - PREAMP
5 =	NF - GND
6 =	U14 - CHANGER
7 =	TEL MUTE
8 =	NF - AUX
9 =	L - IN
10 =	R - IN
11 =	DIG - GND
12 =	SCI - TXD
13 =	SCI - RXD

PL 8115 A2

FM-MODUL  
UKW-TEIL



FM-ZF  
FM-IF

MULTIPATH

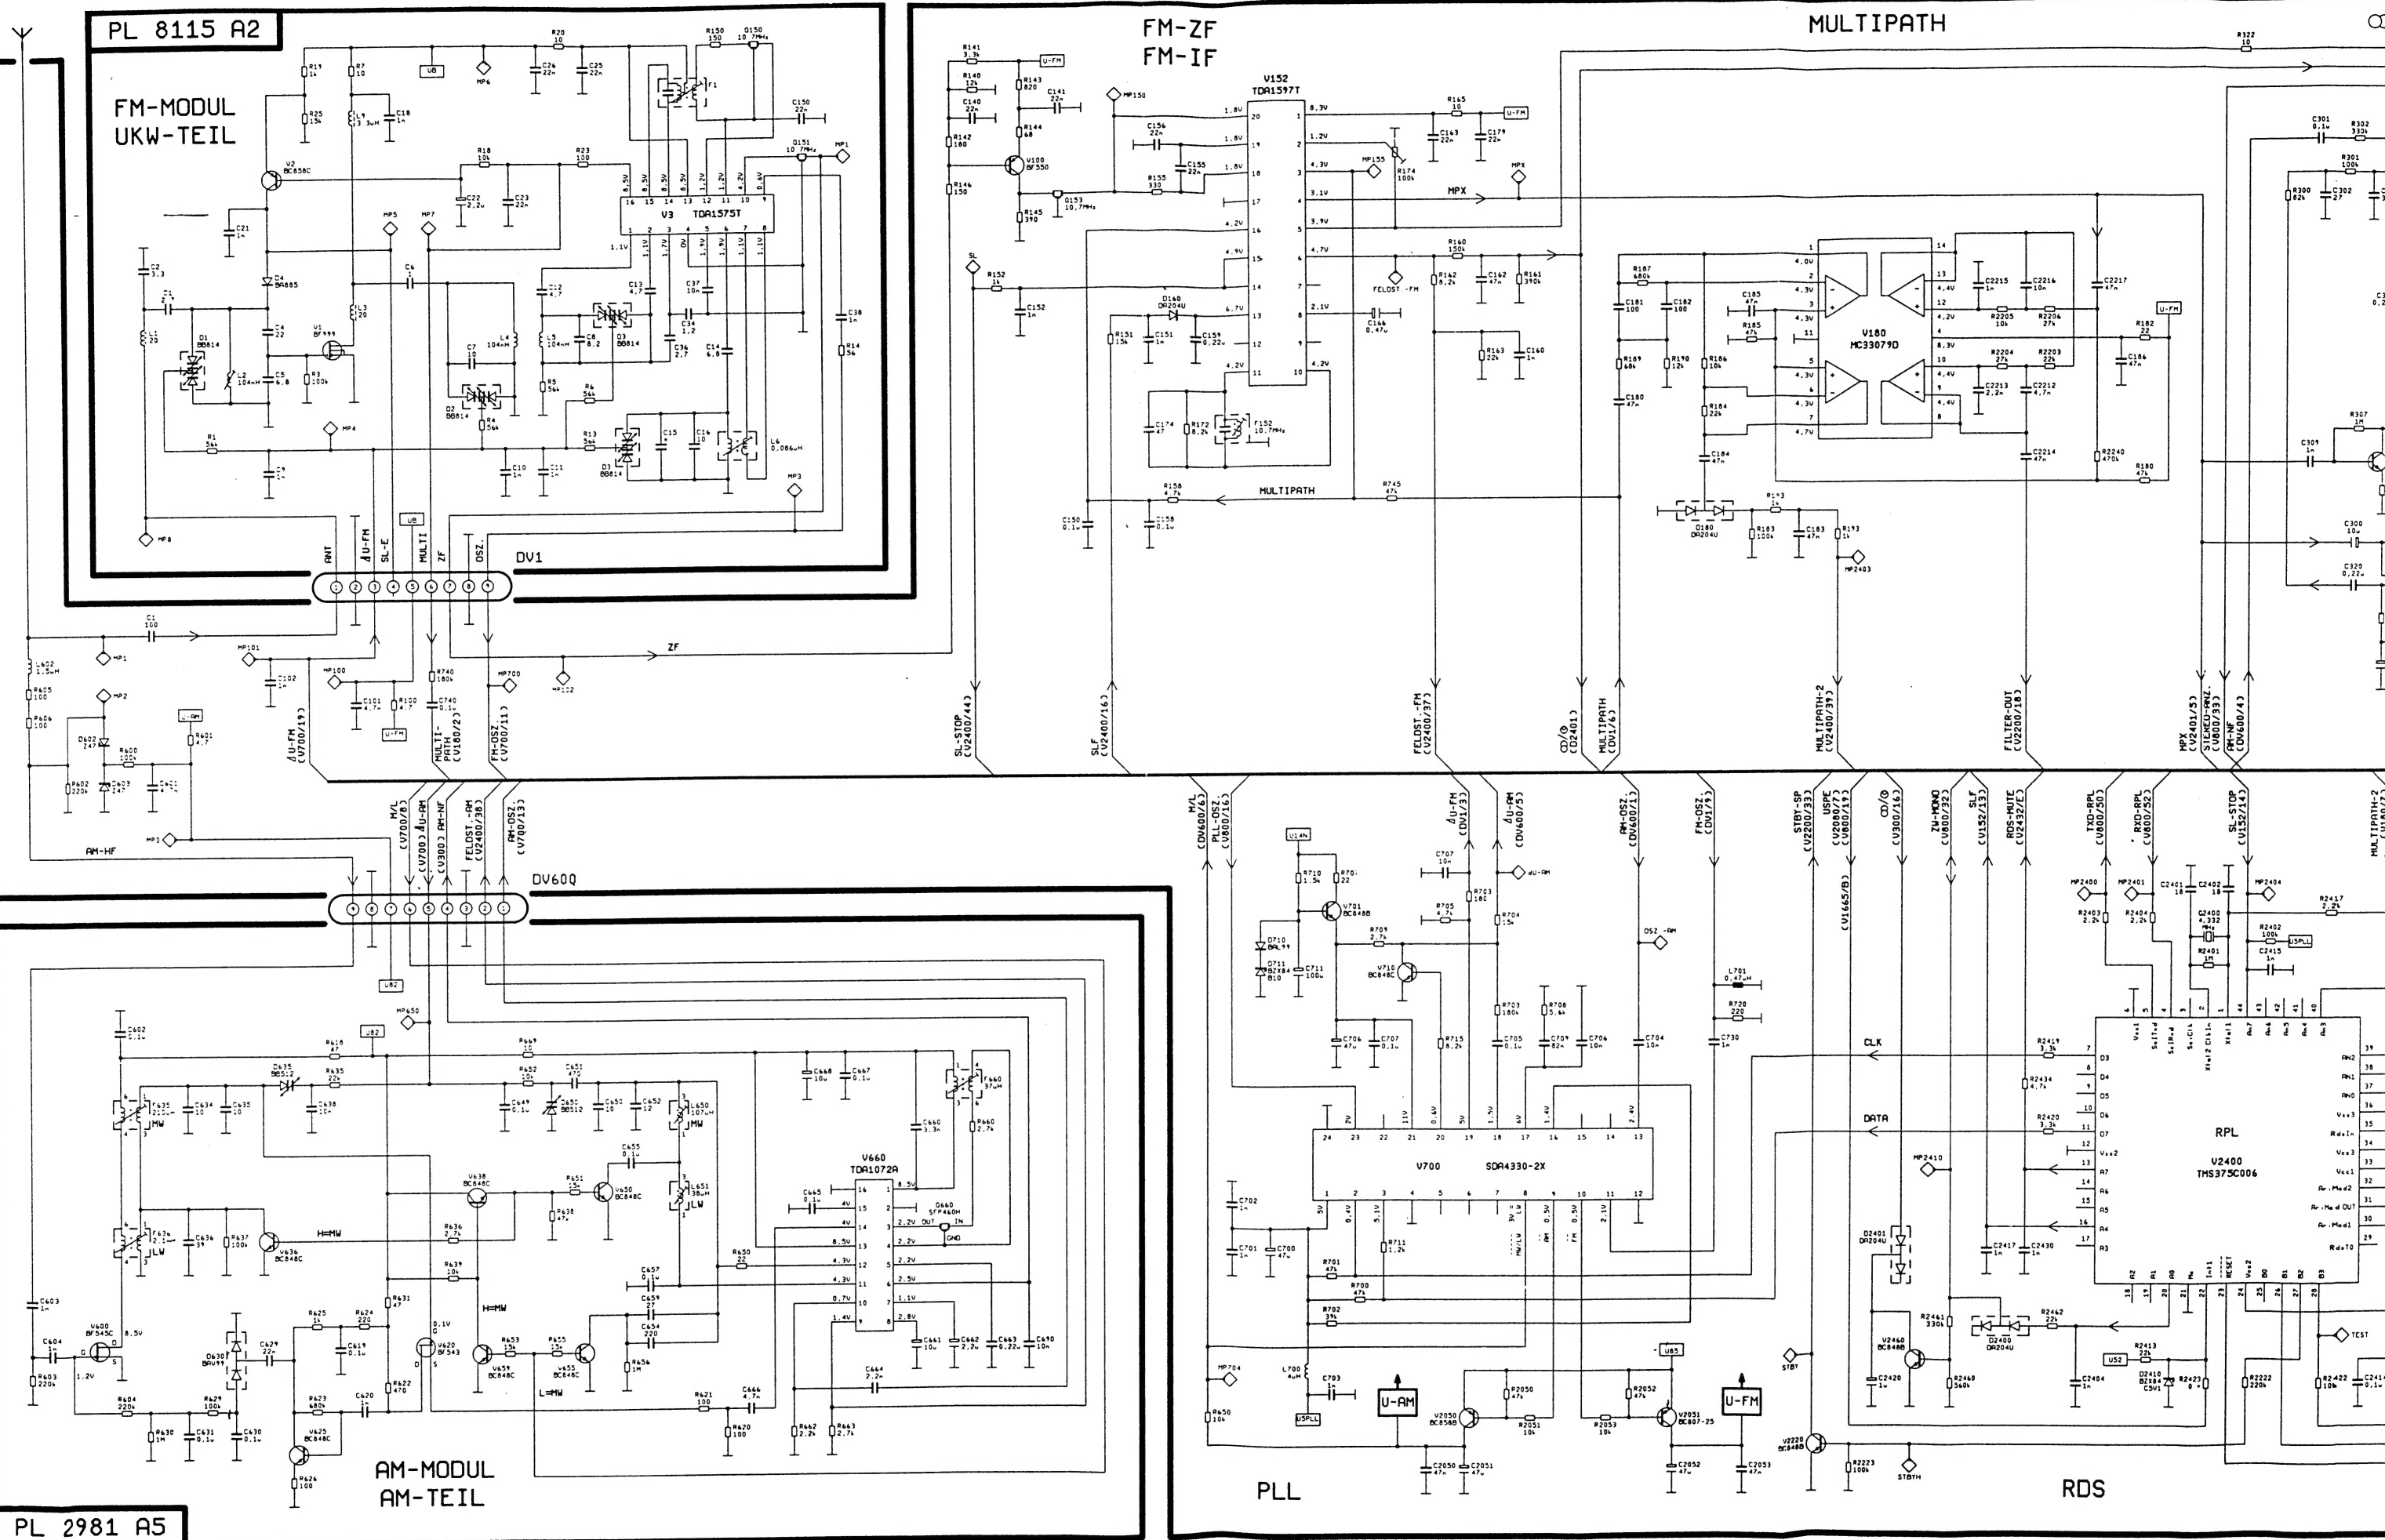

PL 2981 A5




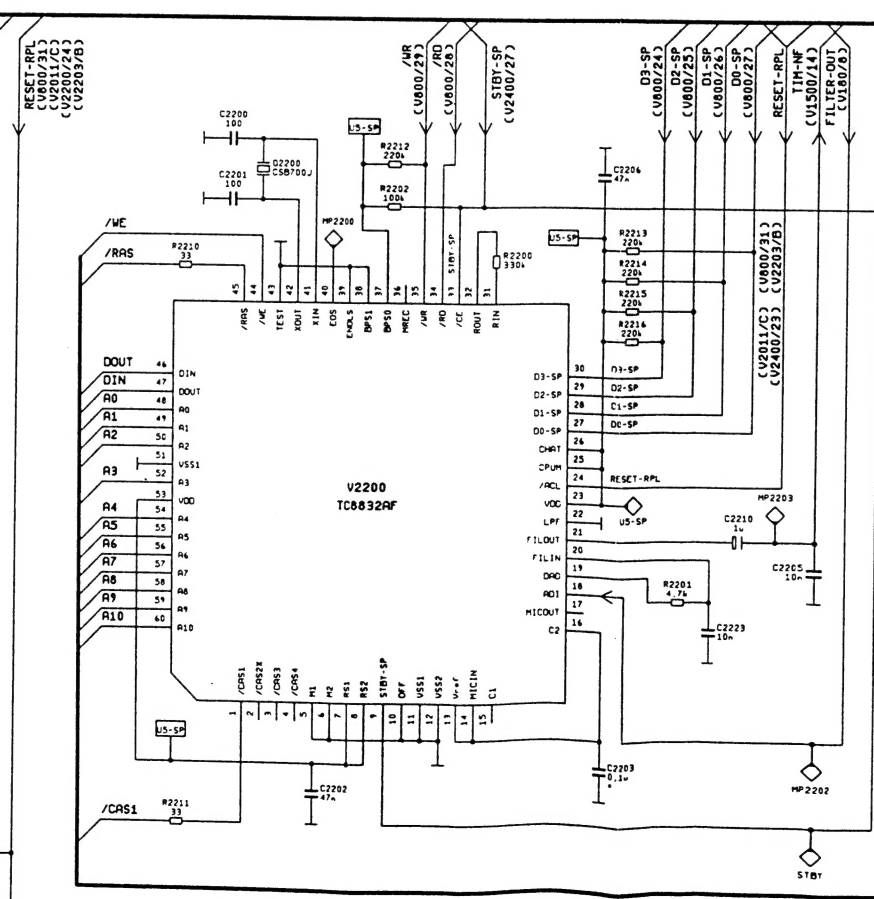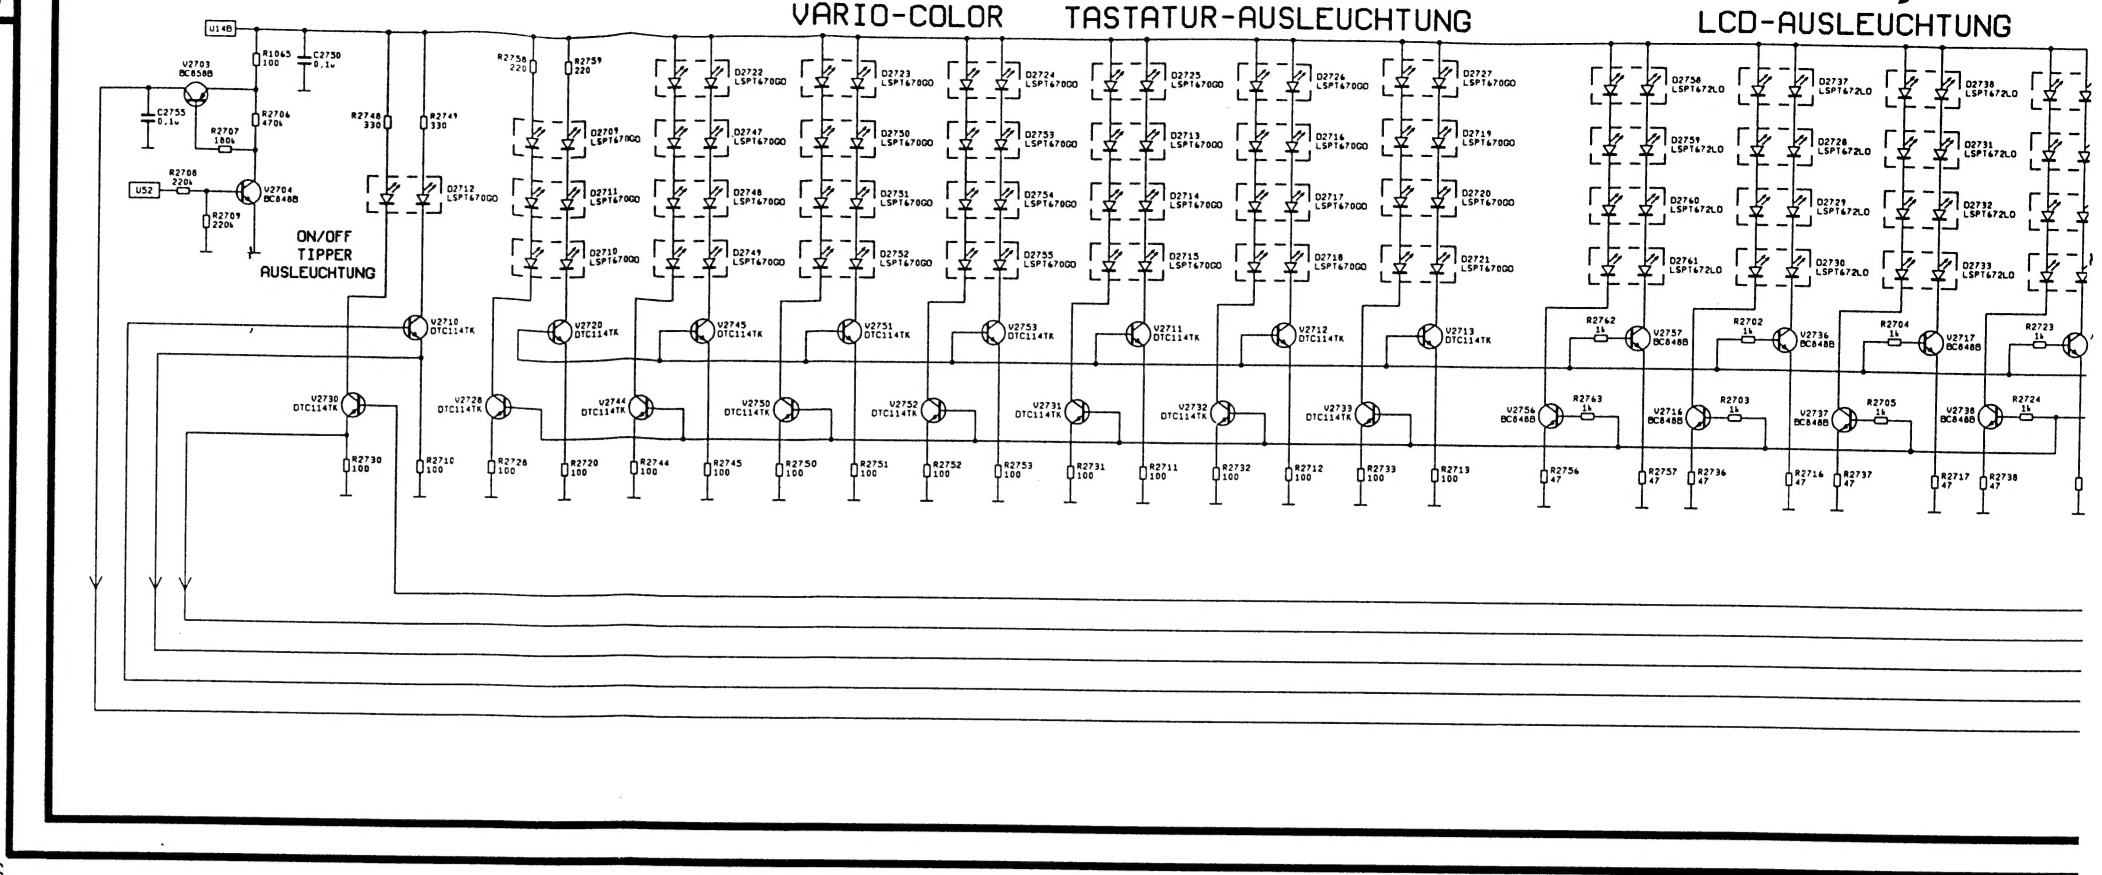

V2201  
HYB514100BJ-80

DIN 1  
/WE 2  
/RAS 3  
/CAS 4  
NC 5  
A10 10  
A0 11  
A1 12  
A2 13  
A3 14  
VCC 15  
A4 16  
A5 17  
A6 18  
A7 19  
A8 20  
A9 21  
A10 22  
/NE 23  
/CAS 24  
DOUT 25  
DQ0 26


0.5-5V  
220pF  
77n

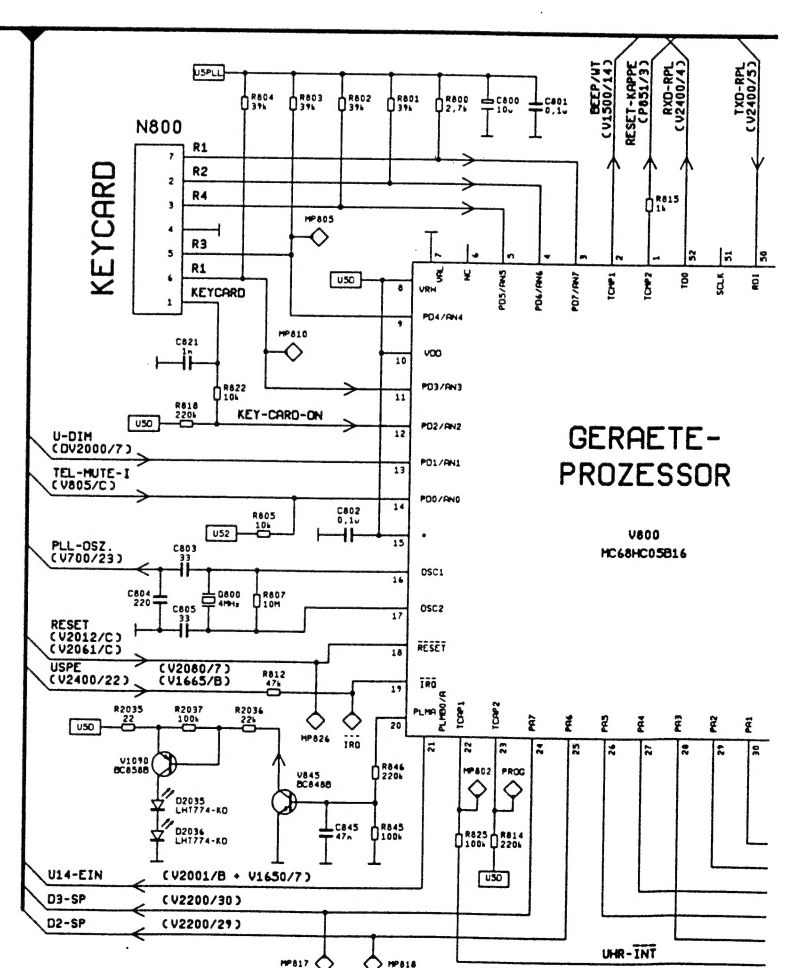

TIM





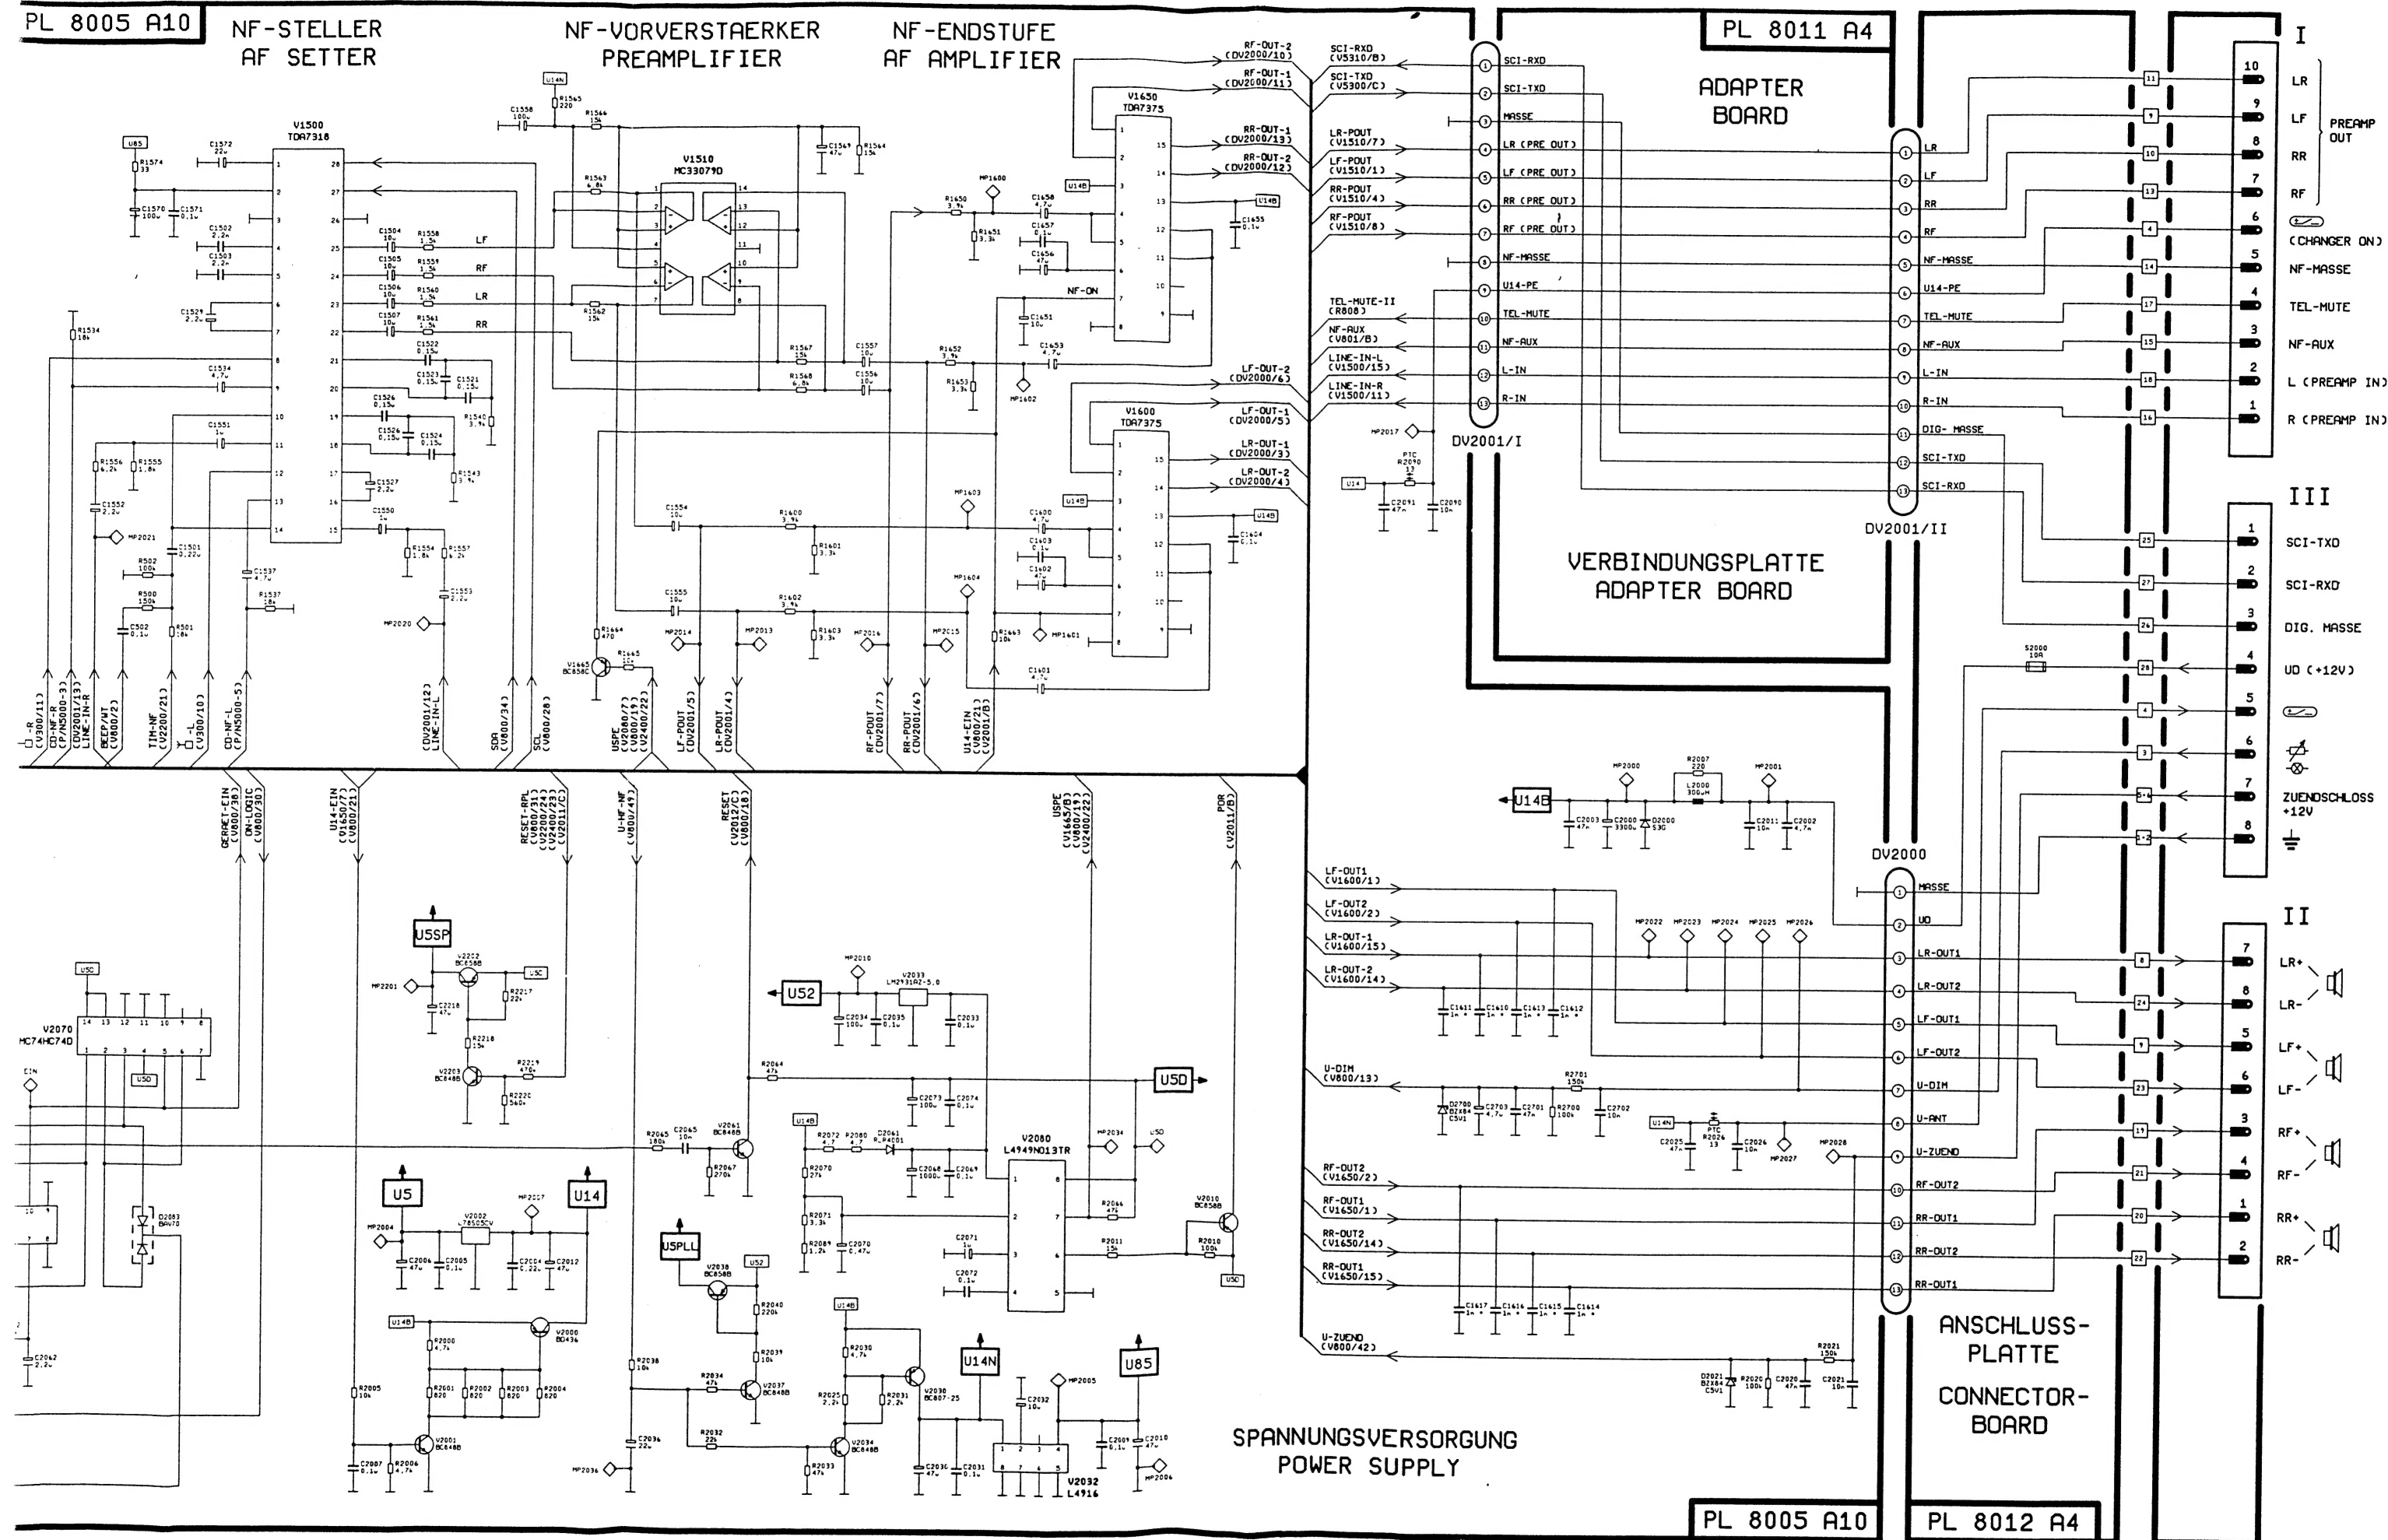


DV1	
1 = ANT	6 = MULTIPATH
2 = GND	7 = ZF
3 = ΔU - FM	8 = GND
5 = U - FM	9 = FM - OSZ

DV600	
1 = AM - OSZ	6 = M/L
2 = FELDST. AM	7 = U82
3 = GND	8 = GND
4 = AM - NF	9 = AM - ANT
5 = ΔU - AM	

DV2000	
1 = GND	8 = U - ANT
2 = UD	9 = U - ZÜND
3 = LR - OUT +	10 = RF - OUT -
4 = LR - OUT -	11 = RF - OUT +
5 = LF - OUT +	12 = RR - OUT -
6 = LF - OUT -	13 = RR - OUT +
7 = U - DIM	

Hauptplatte  
Main Board  
PL 8005 A10

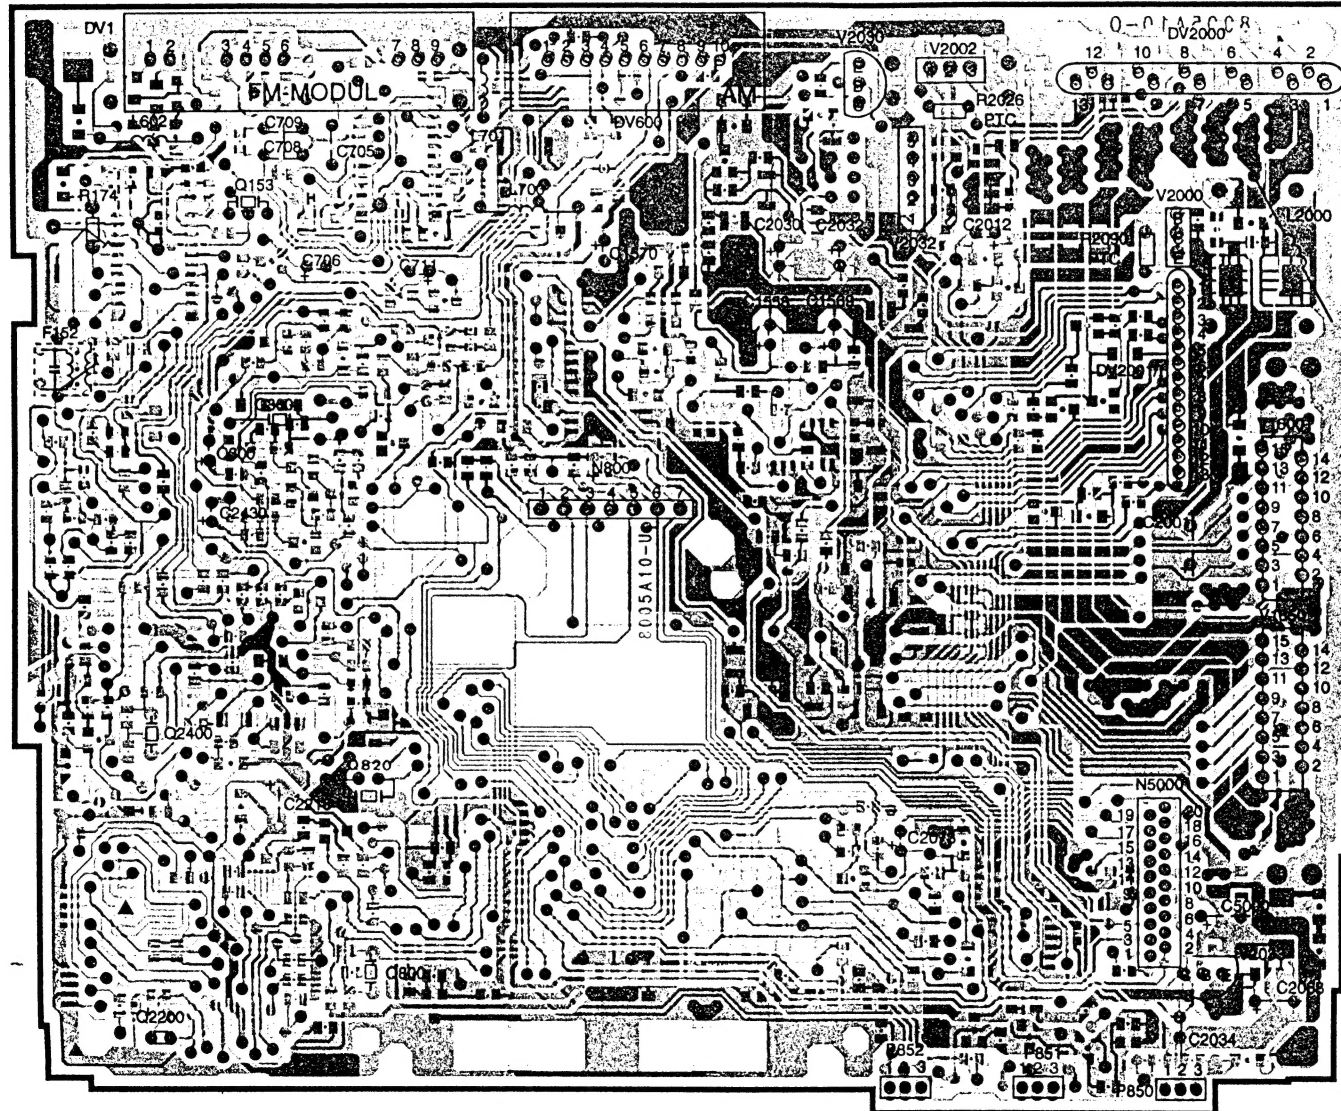

DV2000/I	
1 = SCI - RXD	
2 = SCI - TXD	
3 = GND	
4 = LR - PREAMP	
5 = LF - PREAMP	
6 = RR - PREAMP	
7 = RF - PREAMP	
8 = GND	
9 = U14 - PE	
10 = TEL MUTE	
11 = NF - AUX	
12 = L - IN	
13 = R - IN	

N5000	
1 = I N SW	
2 = MASSE	
3 = CD-NF-R	
4 = MASSE	
5 = CD-NF-L	
6 = } U5	
7 = }	
8 = }	
9 = MP5004	
10 = }	
11 = }	
12 = } U5	
13 = }	
14 = RESET - CD	
15 = SLEEP - CD	
16 = CS - CD	
17 = SCK - CD	
18 = D - CD - MS	
19 = D - MS - CD	
20 = SRQ - CD	


P852	
1 = CLK	
2 = DATA	
3 = ON / OFF	

P851	
1 = ASCII - OUT	
2 = ASCII - IN	
3 = RESET - S	

P850	
1 = U51	
2 = GND	
3 = U14B	



Hauptplatte  
Main Board  
PL 8005 A10  
Chip  
↑

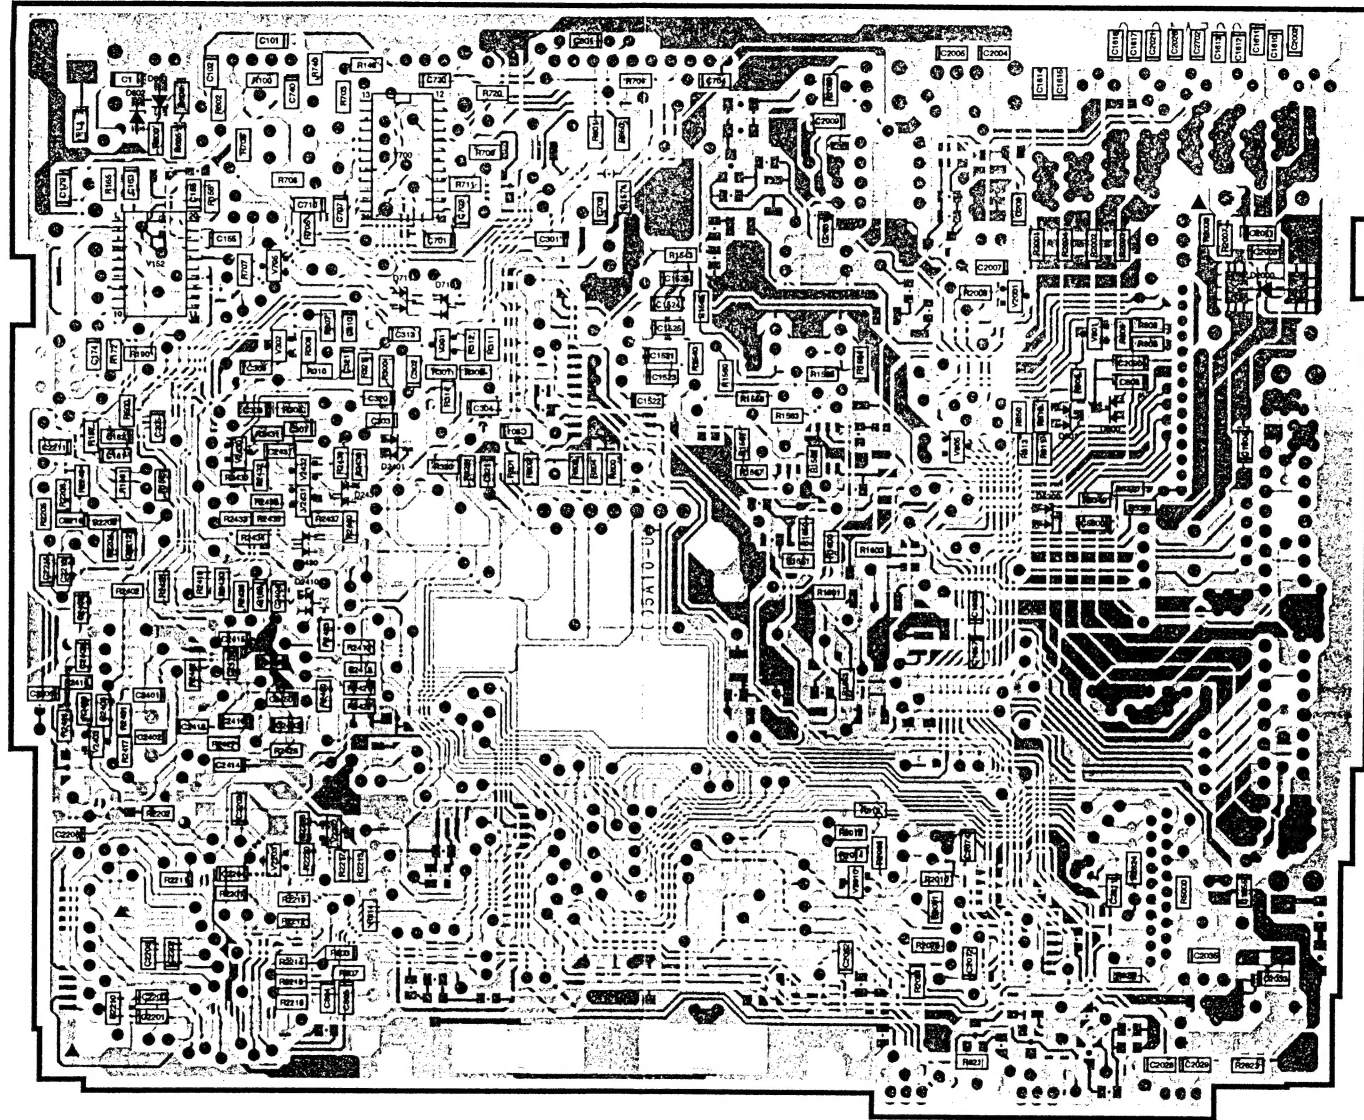


# FM-Platte

PL 8115 A02




DV1
1= HF-ANT
2= MASSE
3= ΔU-FM
4= NC
5= U81
6= MULTIPATH
7= ZF
8= MASSE
9= FM-OSZ

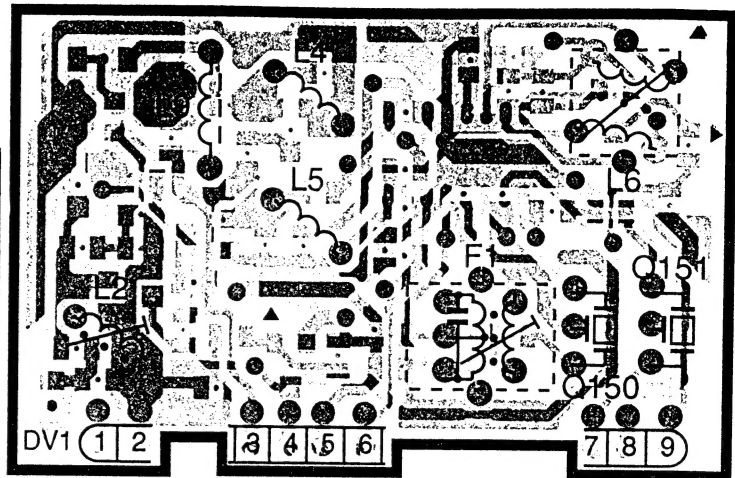

## FM-Platte

PL 8115 A02


Chip

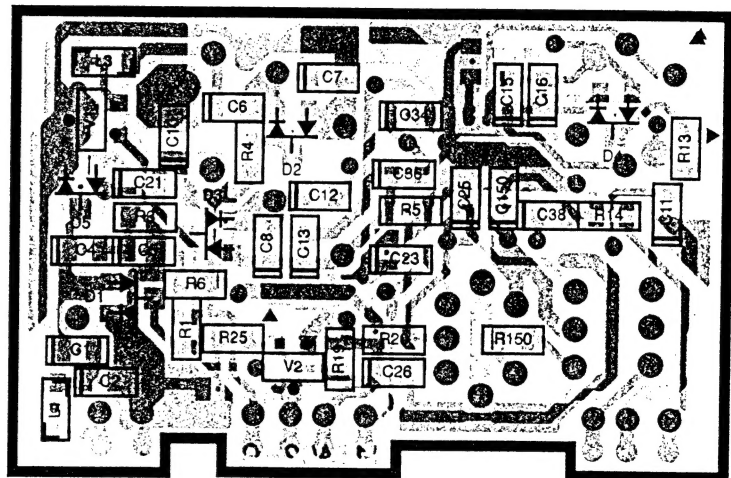

## FM-Platte



PL 8115 A02


Chip

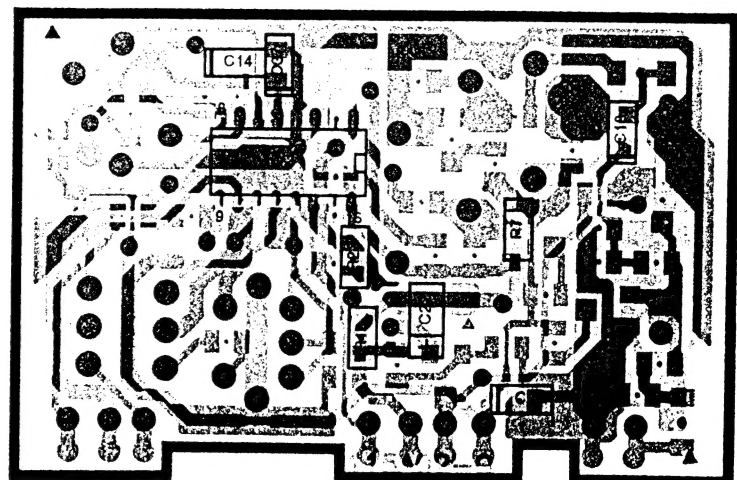



## Schalterplatte Key board

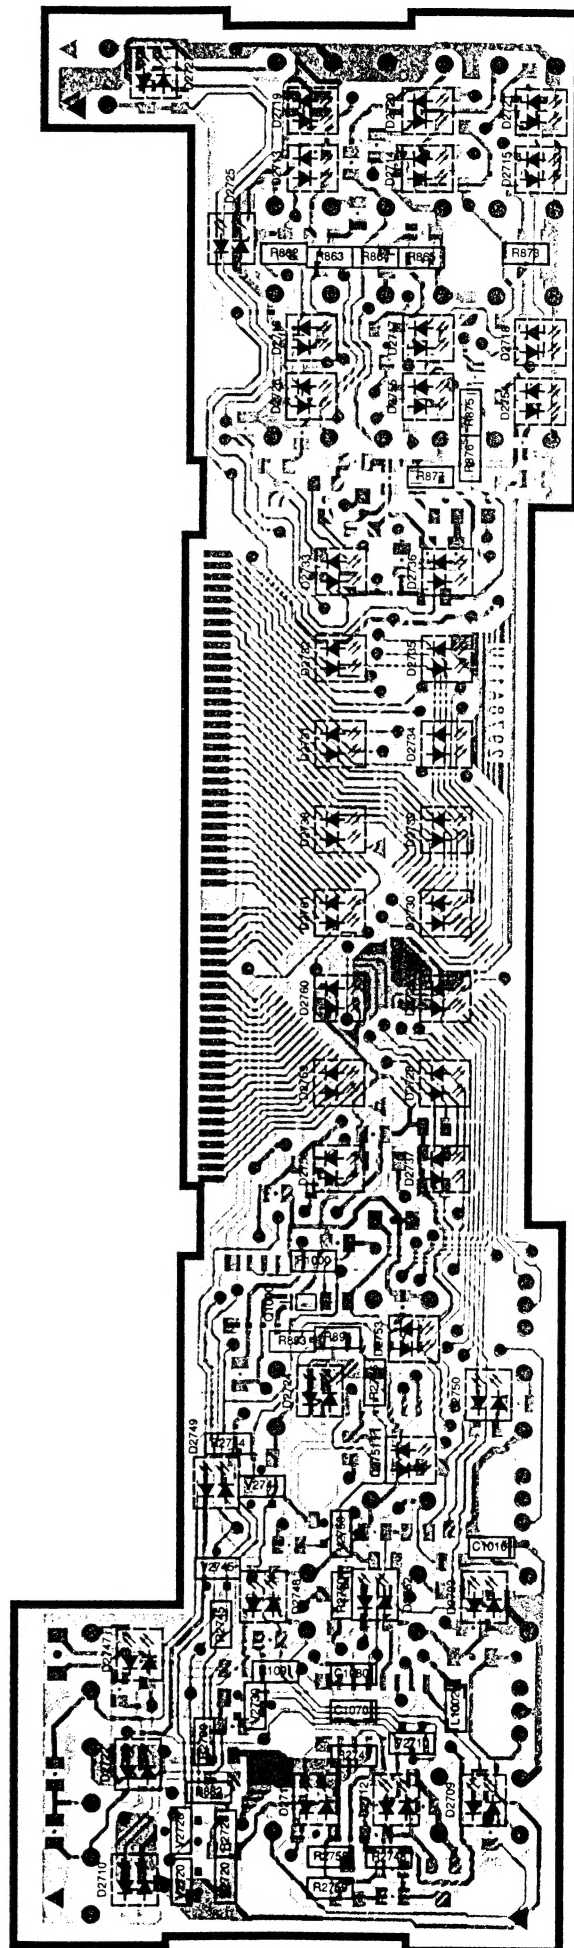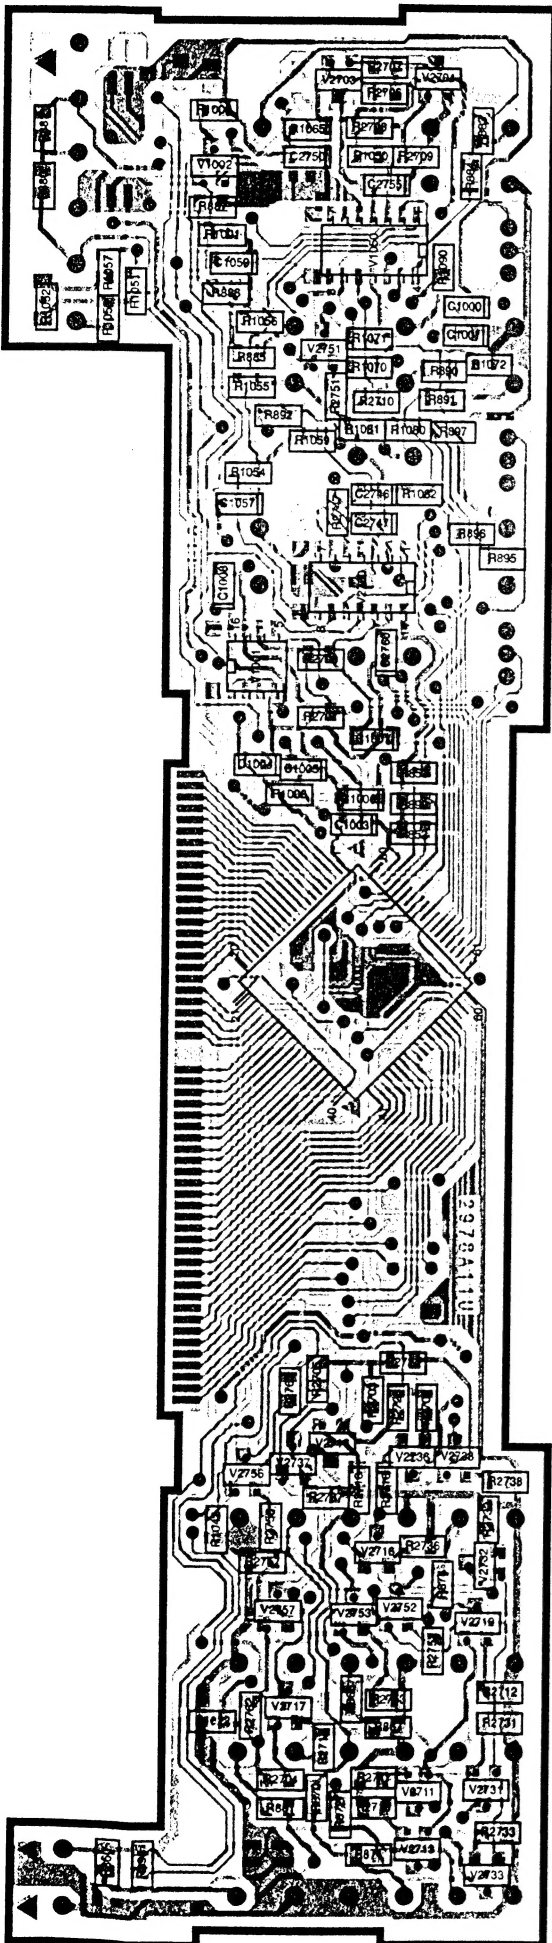

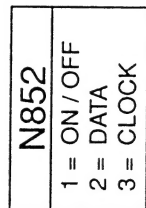

lo CLR

1 = ON / OFF  
2 = DATA  
3 = CLOCK



Hauptplatte  
Main Board  
PL 8005 A10  
Chip

